

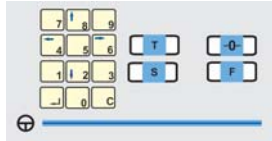

 GRUPO EPELSA		MARTE 10 MF					
		Technical Information					
Capacity	6kg	15kg	30kg	6/15kg	15/30kg	12kg (6.000d)	30kg (6.000d)
Division	2g	5g	10g	2/5g	5/10g	2g	5g
Minimum Load	40g	100g	200g	40g	100g	40g	100g
Maximum Tare	3.000g	9.995g	9.990g	3.000g	9.995g	3.000g	9.990g
Main 	Low-consumption counter scale with piece counter. Automatic repositioning to Zero, Zero key.						
Display 	LCD indication display with 5 digits for WEIGHT, 6 digits for TARE, and 7 digits for number of PIECES. TARE indication, energy saving deactivated indication, battery level indication, zero weight, stability, net weight.						
Keyboard 	17-key keyboard, numeric keys for data introduction, cursors for Menu browsing, clear key, validation data key, level correction and recuperation and disconnection key.						
Programmable Data	Programming: 20 numeric Tares, 20 levels, 20 unit weights, Beep. Weight-Tare function, levels and counting pieces mode with manual introduction or by comparison.						
Memory	8032 Microprocessor, numeric tares storage, levels and unit weight storage.						
Interface	Possibility of scanner connection. HOST connection through canal RS-232, without control (RTS). Type Tpv (NO, 0, 1, 2A, 2B, 7, 8, 9, 10, P ECR1, P S100, PS100A, P ECR7, P QRN).						
Features 	6 V, 10A internal battery, external charging of 12V, 500mA, and an optional 12V external battery. Functions in basic weight mode, levels mode, and piece-counting mode. Semi-automatic Tare, accumulating Tare, numeric codified Tare and manual numeric Tare. Different menu levels.						
Operating Temperature	-10° a +40° C						
Voltage	12 V, 500 mA external adaptor 6 V, 10 A internal battery 12 V external battery connection						
Current Consumption	Between 0.5 y 12w						
Frequency	50 / 60 HZ						