

## Superior performance

Top of the range for every market



### Euroscale range

The EUROSCALE range combines an attractive and functional design with a powerful hardware based in a last generation microprocessor assuring solid and stable TCP-IP communication among all the scales of the network.

The EUROSCALE range has well tested Software suitable for mid and large supermarkets. This range is the appropriate tool for every business requirement offering specific solutions for every working mode: Receipt printer models, labelers, counter scales, hanging scales, self service or flat models.

# Easy and effective control in any type of business

The Euroscale range scales provide the best control of your business, very easy to use but with a great reliability and security for your business, all at the best price.

## Type of business

Euroscale range includes a wide variety of models, with ticket, with label, ticket and label, counter, hanging, flat, with column, double body, etc., combined with its complete software ensures the perfect job at any type of business.

## Metrological shielding

With an exclusive storage system in which all parameters are saved at a metrological level, so you can repair your computer without breaking the seal, that means that you can replace any board and any component and always at a low maintenance costs.

## Software

Very effective software, widely used, with great experience and robustness, easy handling, fast, agile, but with the most complete information for your business is fully controlled in detail.

## Display

The scales in this range have a graphic display which as well as weight, price and amount you can view all types of indicators, logos, advertising, special offers, etc.

## Communications

Ability to interconnect up to 60 devices via Ethernet, centralized full control, HOST connection via Ethernet or RS-232, connection to cash drawer and scanner.

## Functionality

It has all the different working modes, so selling, packaging, selfservice, super, etc.. Therefore it is valid to work in any environment.

## Versatility

The range is so wide that there are models only with receipt printer, other only with label printer, with receipt and label printer, etc.

## Print

Euroscale range scales allow printing on various media, continuous thermal paper, self-adhesive labels or continuous adhesive paper. The printer speed is programmable and graphic, print logos, negatives, more than 80 fonts, barcodes, all tickets and listings are fully configurable.

## Keyboards

Keypad of 98 keys which 49 are used to direct PLUs and functions. 10 direct tables of quick access, standby key to disconnect and 14 active sellers.

## Operation

There are various menus through you can easily access to all the functionality of the equipment, have different levels, different access, allowing the management, configuration and data processing business to be controlled at all times.

## Models in the Euroscale range

The Euroscale range of GRUPO EPELSA consists of a variety of scales as shown below:



**Euroscale 20 V14 98T**

Counter scale, double body, printer



**Euroscale 22 V14 Inox 98T**

Hanging scale, printer



**Euroscale 20 RL 98T**

Counter scale, double body, labeller



**Euroscale 22 RLI Inox 98T**

Hanging scale, printer and labeller



**Euroscale 20 RLI 98T**

Counter scale, double body, printer and labeller



**Euroscale 20 RLSS ABS 98T**

Counter scale, labeller, assisted sales



**Euroscale 20 RLP ABS 98T**

Counter scale, labeller



**Euroscale 22 RL Inox 98T**

Hanging scale, labeller




**Euroscale 20 SS 110T**

Self-service, labeller


## Technical features

- Electronic based on ARM / INTEL 386 micro-processor, on multilayer electronic design.
- Oriented to any kind of business, from small shop to the large market.
- Graphic display, possibility programming logos, advertising, offers. Has brightness control.
- 98 keys keyboard, 10 direct tables for PLU's access, 14 active sellers, stand-by button to disconnect.
- Data program and sales reception via PC with software sales Hydra +
- Stores up to 10,000 tickets, 20,000 lines, bit-maps, countries, taxes, barcodes, etc.
- Interconnection of up to 60 devices via Ethernet
- Software upgrade via Ethernet and RS-232.
- Graphic Printer, programmable speed.
- Digital Cell microprocessor
- Scanner connection, drawer

## Details keyboards, screen, cell plate

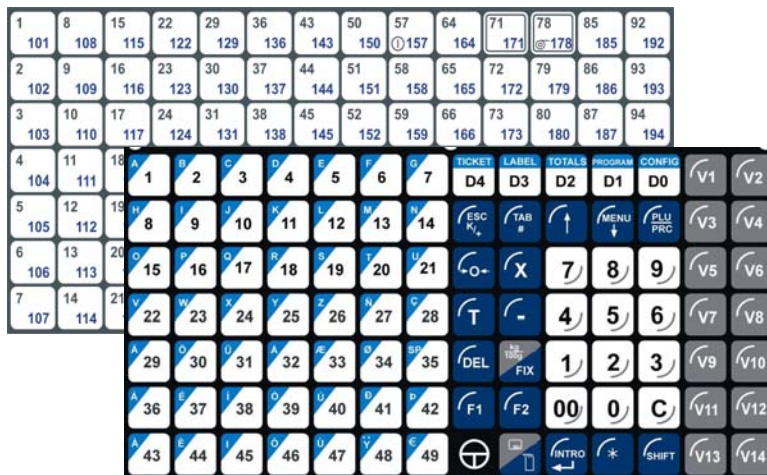

## Examples of tickets and labels

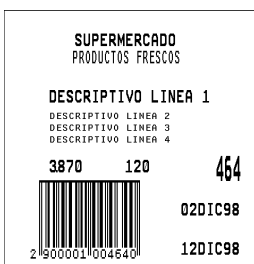

<b>Capacity</b>	6 kg	15 kg	30 kg	6 -15 kg	15 - 30 kg
<b>Division</b>	2 g	5 g	10 g	2 - 5 g	5 - 10 g

## GRUPO EPELSA SPAIN

C/ Punto Net, 3  
Parque Tecnológico TECNOALCALÁ  
28805 ALCALÁ DE HENARES (Madrid)  
Telf. +34 91 830 46 16 Fax. +34 91 830 58 64  
e-mail: infomad@grupoepelsa.com

Sant Bartomeu, 108-109 Pol. Ind. La Vallidan  
8600 Berga (Barcelona)  
Telf. +34 93 822 13 33 Fax. +34 93 821 22 34  
e-mail: infobrg@grupoepelsa.com

Ctra. Sta. Creu de Calafell, 35  
8830 Sant Boi de Llobregat (Barcelona)  
Telf. +34 93 654 62 12 Fax. +34 93 654 54 53  
e-mail: infobcn@grupoepelsa.com

EXA - Pesage Electronique  
4, rue Rémora  
Zone d'activités REMORA  
33170 Gradignan, France  
Tel.: +33 556 757 780 Fax: +33 556 757 781  
e-mail: info@exa-france.com

## Options



## Technical Service

BARCELONA. E-mail : satbcn@grupoepelsa.com  
MADRID. E-mail: satmad@grupoepelsa.com  
SEVILLA. E-mail: satsevilla@grupoepelsa.com  
VALENCIA. E-mail: satvalencia@grupoepelsa.com